

Fully Pneumatically Controlled Lid and Door Operation

- Ensure Pressure Indicator is Green.
Green = Pressure Present
Red = No Pressure
-

MANUAL MODE

- Turn Operation Selector Valve to “Manual”

OPEN LID AND DOOR

- Turn Lid Control Valve to “Open” = Lid should open
- Once Lid is fully open, turn door control valve to “Open” = Door should open
- The door can now be opened and closed using the door control valve independent of the lid.

CLOSE LID AND DOOR

- Turn Door control valve to “Close” = Door should close.
Important: Close Door completely before closing Lid.
 - Turn Lid Control Valve to “Close” = Lid should close
-

AUTO MODE

- **Door control must be in “Close” position to use Auto Mode**
- Turn operation selector valve to “Auto” operation

OPEN LID AND DOOR

- Turn lid control valve to “Open” = Lid should open.
- When appropriate, the door will also open automatically.

CLOSE LID AND DOOR

- Turn Lid Control to Close and both the lid and door will close.
(Note: The door will close faster than the lid to ensure it is closed before lid closes.)
-

If compressed air is lost in the system during operation, due to a broken pneumatic line or compressor failure etc., the lid should remain in its last position for a period of time.