


CellBlock Battery Cabinets Installation Instructions

Applies to all cabinet models

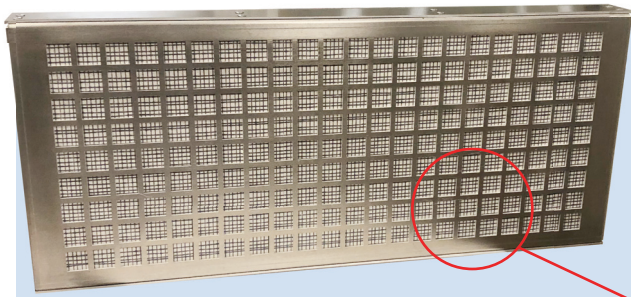


BOTTOM VIEW OF SHELF

CellBlock Storage Cabinets are a superior solution for the safe storage of lithium-ion batteries and devices containing them. The cabinet shelves provide fire extinguishing capabilities via a gravity-fed system. Therefore, they must be installed correctly to be effective in a battery fire situation.

The grate must face down so that it is on the **bottom** of the shelf to allow the flow of CellBlockEX during a fire.

Shelf brackets are pre-installed in the cabinet. Install shelves by lowering each shelf in place.

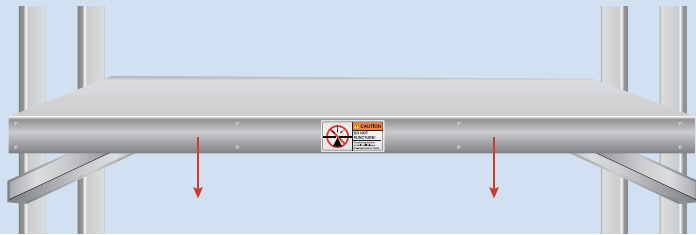

CAUTION

Take care to not puncture the bottom of the shelves. Puncturing the bottom of a shelf will release the fire-suppression media



FOR CABINETS EQUIPPED WITH OPTIONAL 110V POWER STRIPS:

- Cabinets must be direct wired by a licensed electrician.
- Outlets and power strips are marked for ease of installation.
- Each power strip is rated for 15 amps. Depending on the required amperage draw, your electrician may opt to wire one strip per circuit, or may wire two power strips per circuit.
- A sub panel is recommended.



NOTE: Shelf placement has been engineered for optimal performance of the extinguishing system. Using fewer shelves, or altering the spacing between shelves may reduce effectiveness in a battery fire situation.


CellBlock Battery Cabinets Installation Instructions

Applies to all cabinet models



ATTENTION

Your cabinet has been precision manufactured. Your cabinet must be level and plumb to achieve appropriate door alignment for a tight seal.

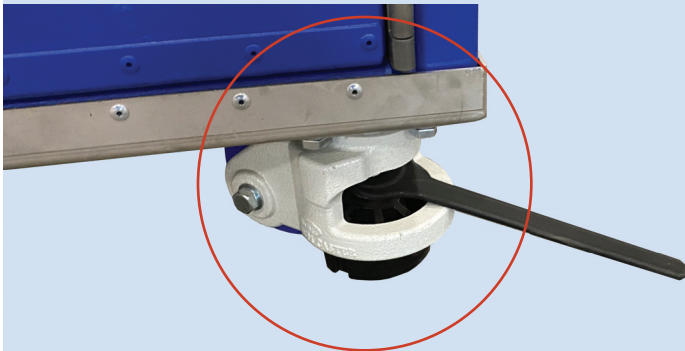

Place the supplied level on the top of the cabinet and on the front and sides to determine if the cabinet is level and plumb.



The supplied wrench can be used to adjust the wheel height to achieve proper alignment.



VERIFY IF YOUR CABINET IS LEVEL AND PLUMB

There are two ways to verify that your cabinet has been properly aligned.

- 1 Measure the front of your cabinet from corner to corner to ensure the distances are equal.

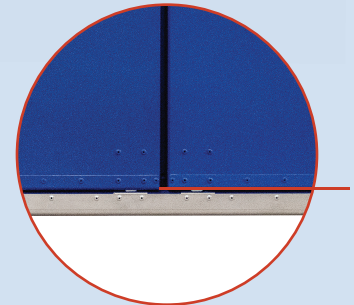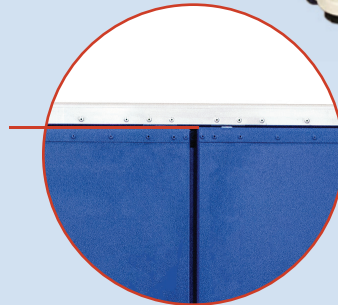

- 2 Check the top and bottom door alignment. They should line up horizontally.



ATTENTION



Your cabinet is equipped with anti-tip anchors. Once the cabinet is installed, these should be attached to a load-bearing support.