



Safety


The below procedures should be considered recommendations and are provided as guidance only. It is the responsibility of the individual assess the situation and act accordingly.

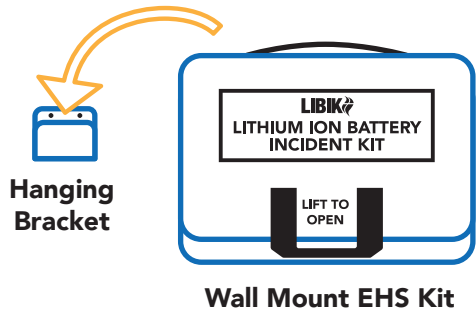

Kit Contents:

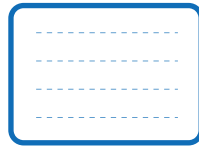

PED-Pad Fire Suppression Pillow

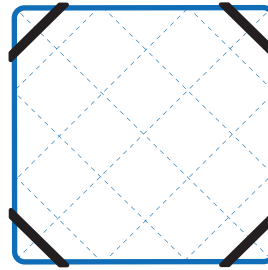

Fire Shield Blanket




CellBlock High Heat Gloves




Safety Goggles
(High Watt Hour Kit Only)




Battery or Device Overheating?

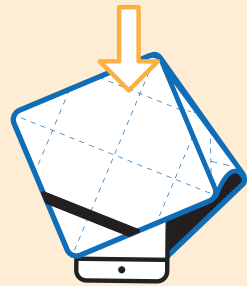


1
Bundle in Fire Shield Blanket

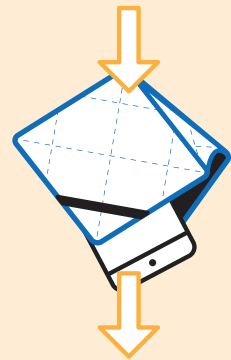


2
Seal in safe container that is rated for lithium-ion batteries, such as a CellBlock Battery Case or Pail/Drum with CellBlockEX Technology

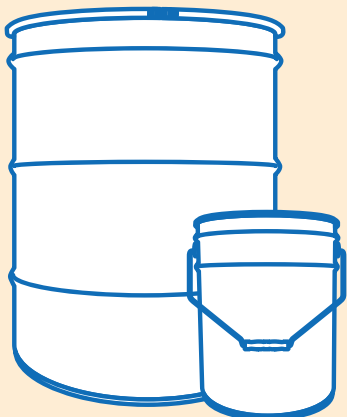

Battery or Device On Fire?

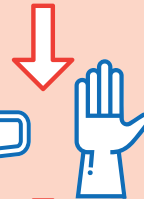


1
Put on CellBlock High Heat Gloves and Goggles (High Watt Hour Kit Only)

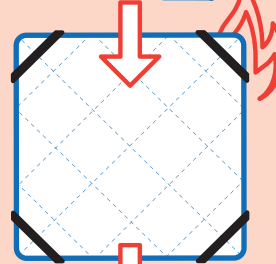

2
Keep Fire Shield Between You and the Flame



3
Apply PED-Pad Pillow to Flame

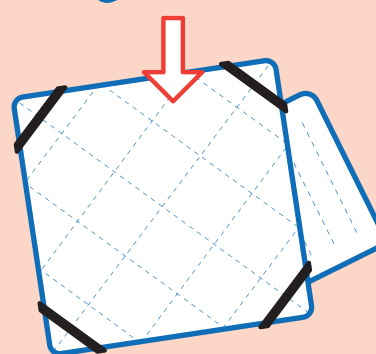

4
Apply Fire Shield to Top of PED-Pad

5
Allow to Fully Extinguish

Leave covered and wait for emergency personnel or follow steps 1 and 2 at left.