


Instructions for Use


You have been provided with this CellSafe Battery Kit for the purpose of shipping your battery or device. Please carefully follow these instructions for the safe shipping of your unit.

1

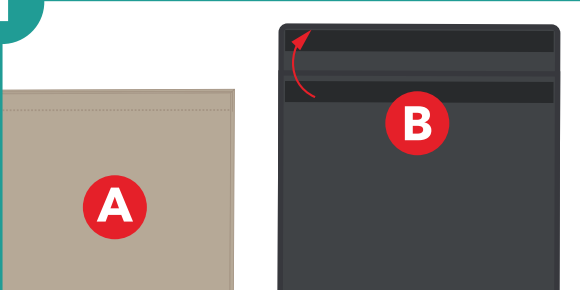


Remove contents from outer envelope. Set aside fiberboard mailer (A) and open textile envelope (B).

2

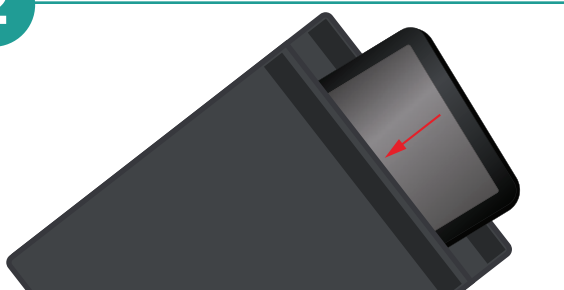


Slide your device or battery into the textile envelope. ⚠ DO NOT exceed 185 Wh per envelope kit.

3

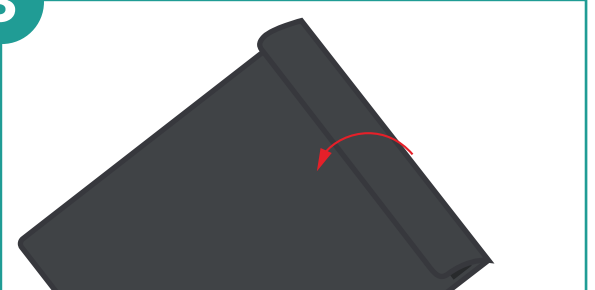


Fold envelope flap and press to seal velcro closure.

4

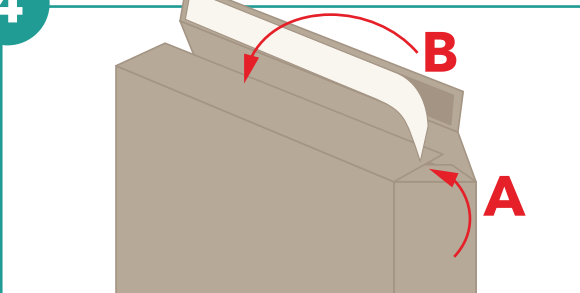


Seal one end of fiberboard box: fold in short flaps (A), then remove backing from selfseal closure and fold in long flaps (B). Press firmly to seal.

5

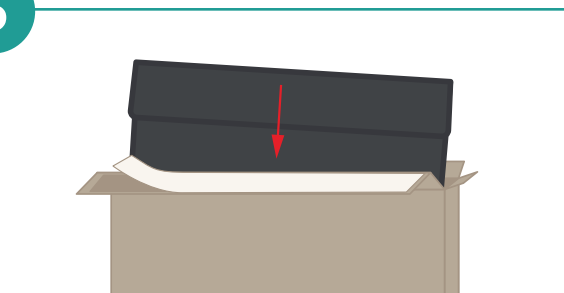

Slide the textile envelope with the device or battery inside into the open end of the fiberboard box. Repeat step 4 to seal the open end of the kit.

6

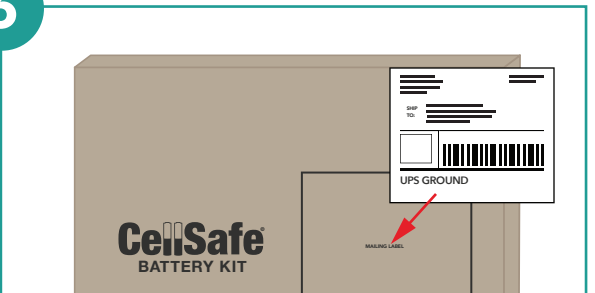

Affix your UPS label if one is not already adhered to the box. This CellSafe Battery Kit is pre-marked with all required regulatory marking. Give to your local UPS agent for shipment.

▶ VISIT [HTTPS://CELLBLOCKFCS.COM/DDRK02](https://CELLBLOCKFCS.COM/DDRK02) FOR VIDEO INSTRUCTIONS

⚠ USE KIT ONLY AS INSTRUCTED!