



INSPECTING CELLBLOCKEX FOR WEAR

While unused CellBlockEX has a long shelf life, extended or improper use can impair the effectiveness. Monitor CellBlockEX for signs of degradation and discontinue use if any of these conditions are observed.

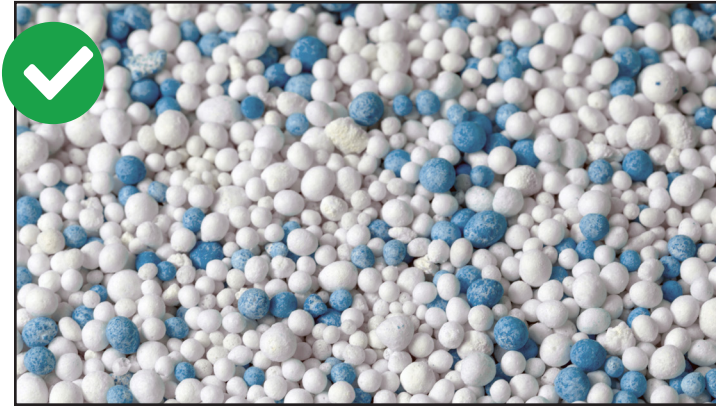

CellBlockEX in perfect condition

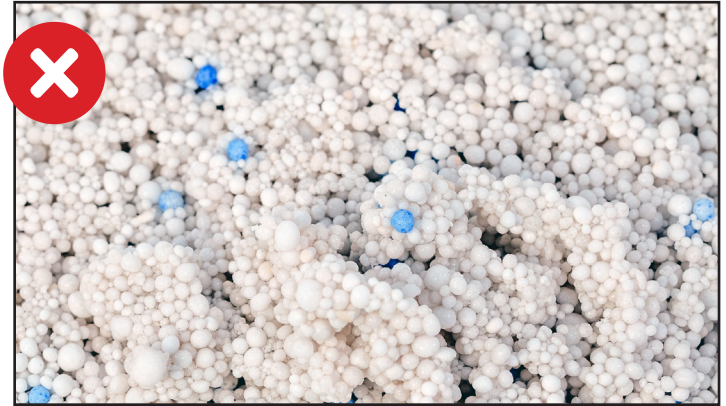

CellBlockEX is wet or clumped



CellBlockEX is contaminated or dirty



CellBlockEX shows signs of a thermal event



No blue granules present



Blue granules are sparse and/or faded

 **Discontinue use if any of these conditions are observed, as this could jeopardize the performance of the CellBlockEX.**